



## MODEL: K3 BUOY

### IPX7 Waterproof Bluetooth Speaker

Thank you for purchasing the K3 Buoy Bluetooth Speaker. Please read instruction (s) carefully before use & feel free to contact [www.thek3company.com](http://www.thek3company.com) with any questions.

#### Table of Contents

- Specification
- Charging the Speaker
- Pairing Your Mobile Device
- Speaker Operation
- Troubleshooting
- Safety and Maintenance

#### Specification

- IP Grade: IPX7
- Bluetooth Version: V3.0
- Battery Capacity: 800 mAh
- Rechargeable Lithium Ion
- Frequency Range: 2.4GHz
- Power Rating: 3W
- SNR:  $\geq 85$ dB
- Operating Voltage: 3.7V
- Charging Voltage: DC 5V
- Charge Time: Approx. 2-3 hours
- Operation Time: Approx. 8-10 hours
- Operating Distance: 10 Meters or 33 feet

#### Charging the K3 Buoy Speaker

1. Insert the charging cable into DC 5V port (micro USB) located on the K3 Buoy speaker.
2. Connect the standard USB plug end of the cable to a power USB port on a computer, K3 Portable Charge or other USB charging device. For first time use, a fully charge is recommended.
3. A red LED is visible while the K3 Buoy speaker is charging and off when the K3 Buoy speaker is fully charged.

#### Pairing Your Device

Please make sure your cell phone (or portable device) is Bluetooth-enabled. Specific pairing steps may vary with different devices. Please refer to your device's user's manual for further information.

1. Turn on your cell phone's Bluetooth function and search for Bluetooth devices. After the search is completed, select "**K3 Buoy**" from the Bluetooth device list.
2. According to the indication, enter password or PIN No:"0000" or "1234"; some cell phones do not need input any password or PIN to pair the speaker, simply press "Pair".
3. After successful pairing, a beep sound will be played.

Remark: Once the K3 Buoy speaker is paired and connected to your mobile phone successfully, next time when you switch on this speaker, it will connect to your mobile phone automatically as long as the Bluetooth is turned on in your mobile. If you need to discontinue pairing, please long press the PHONE button.

#### K3 Buoy Speaker Operation

- POWER button: To switch ON/OFF the unit.
- VOLUMN/NEXT SONG/LAST SONG button: Long hold to volumn up/down; short press to play next/last song.
- PLAY/PAUSE button: Press to play or pause playing music
- PHONE button: Press to answer or hang up the phone calls when incoming calls are indicating.

Remark: 1.You can press the PHONE button twice quickly to redial the last phone call.  
2. Long press the PHONE button to cut off the bluetooth pairing that connecting to your mobile phone in the memory.

## **Troubleshooting**

\*\* Remark: can only be charged with 5V DC charger adaptor or USB. Please utilize USB charge cable included.

### **The K3 Buoy speaker doesn't play**

- Make sure the K3 Buoy speaker is charged.
- Make sure the K3 Buoy speaker and cell phone are connected. Please refer to your cell phone's Bluetooth menu and "Pairing Your Device" section.

### **Cannot pair my cell phone to the K3 Buoy speaker**

- Make sure the K3 Buoy speaker is charged.
- Make sure the K3 Buoy speaker and cell phone are in pairing mode.
- Make sure the Bluetooth of your cell phone is on; please refer to the cell phone's users' manual.
- Make sure the K3 Buoy speaker and your cell phone are within controllable range.

### **If the problem remains, please do as follows**

1. Re-charge the K3 Buoy speaker.
2. Turn off your cell phone and take out the battery, and put it back after.
3. Turn on Bluetooth of your cell phone and delete all the pairing histories.
4. Repeat pairing process with your cell phone and the K3 Buoy speaker.

## **Safety and Maintenance**

- Do not use this device near any heat sources such as radiators, heaters, stoves, or other heat-producing machinery.
- Keep the K3 Buoy speaker out of children's reach to avoid a choking hazard.
- Clean with soft cloth. Do not use harsh chemicals to clean.
- Do not clean this device when it is charging. Always unplug from the power source before cleaning the device.
- Do not insert any metal object into the device. Risk of short circuit.
- Do not try to repair, open or modify the K3 Buoy speaker.